




STEP 1: INSTALL UNIT

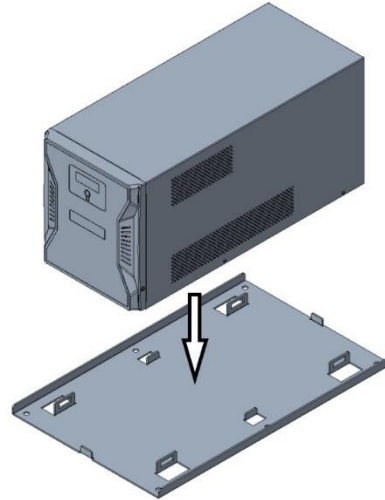


STEP 2: ROUTE STRAP AS BELOW (FRONT AND REAR)

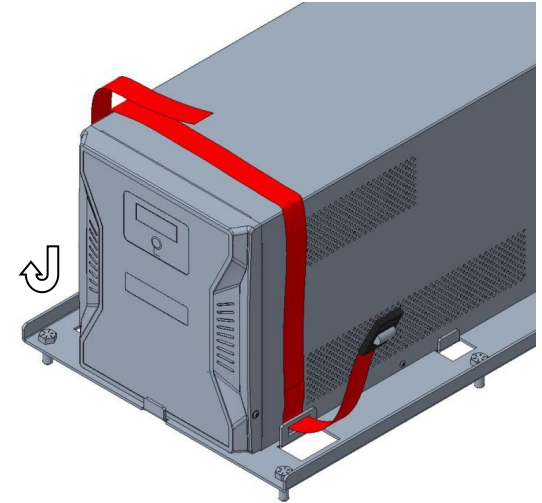

STEP 3: TIGHTEN STRAPS TO REMOVE ALL SLACK (FRONT AND REAR)


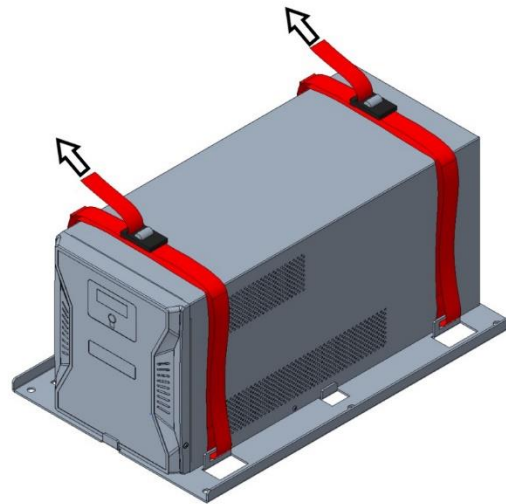


STEP 4: INSTALL UNIT TO FLOOR (REF TO FOLLOWING PAGES FOR DIMS AND BOLT SPEC.)

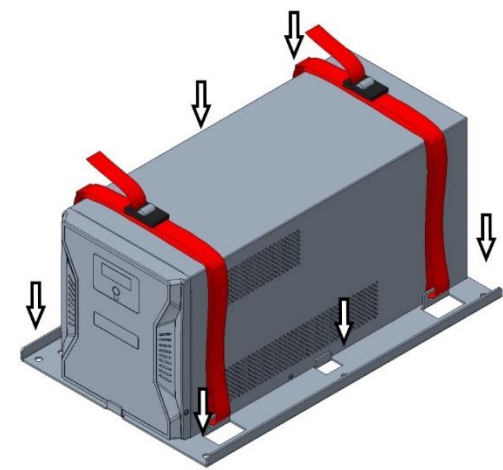



INTEGRITY PRO 600-800VA MOUNTING DIMENSIONS

HOLES FOR 3/8"-16 BOLT (6X)

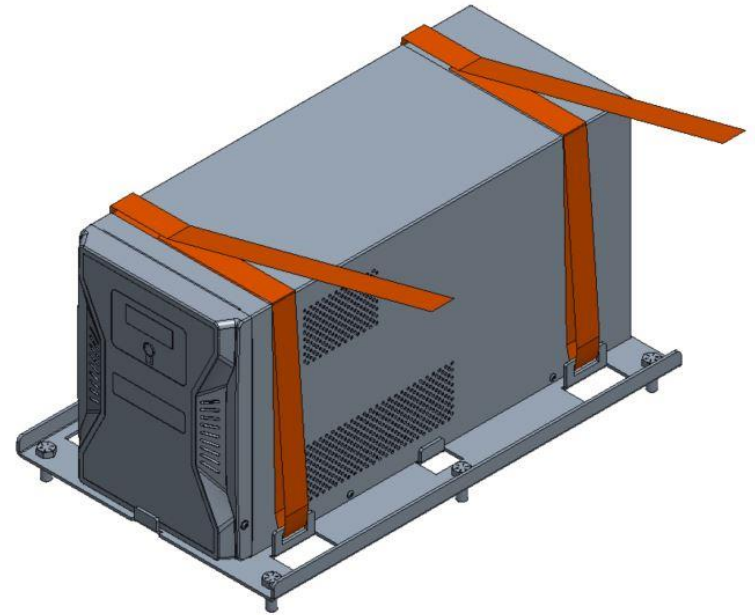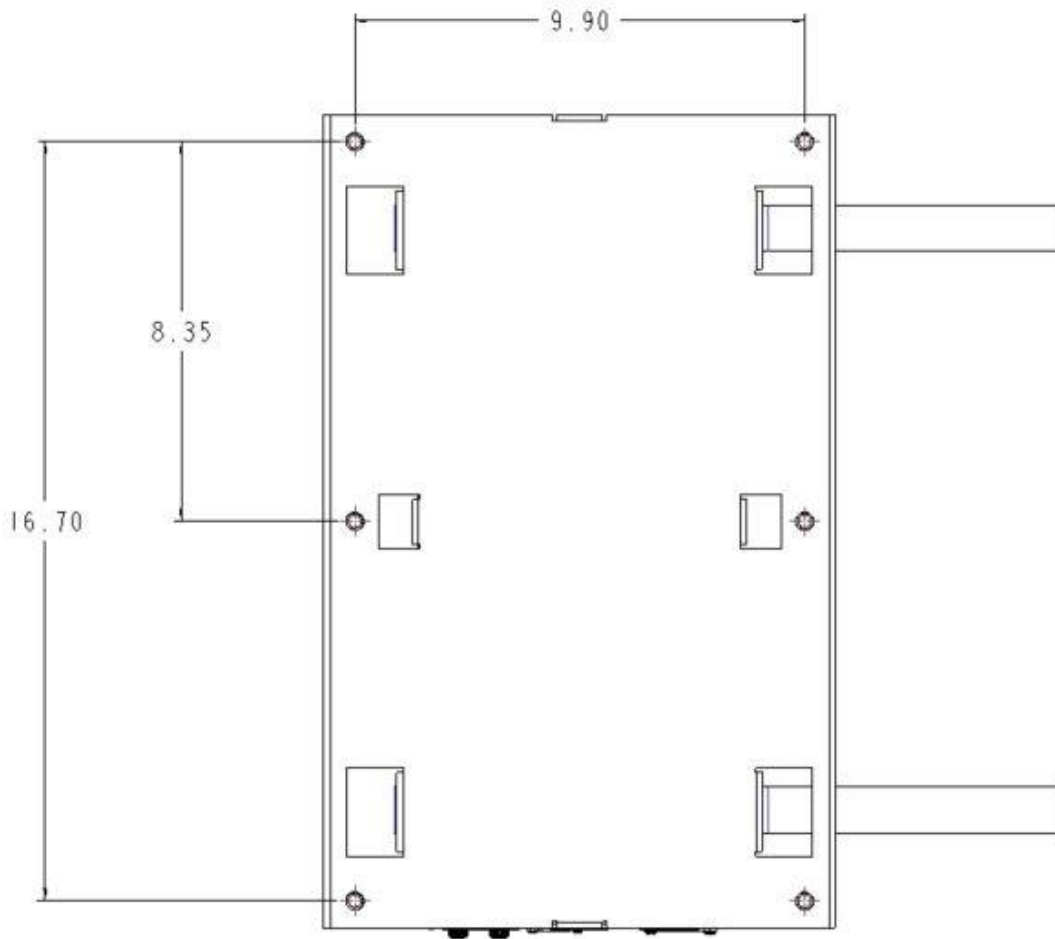

INTEGRITY PRO 1100-1500VA MOUNTING DIMENSIONS

HOLES FOR 3/8"-16 BOLT (6X)

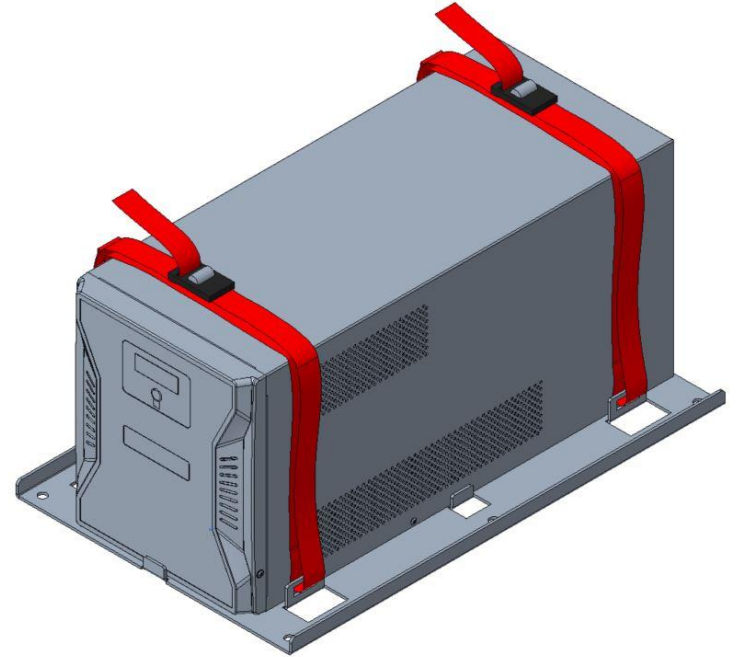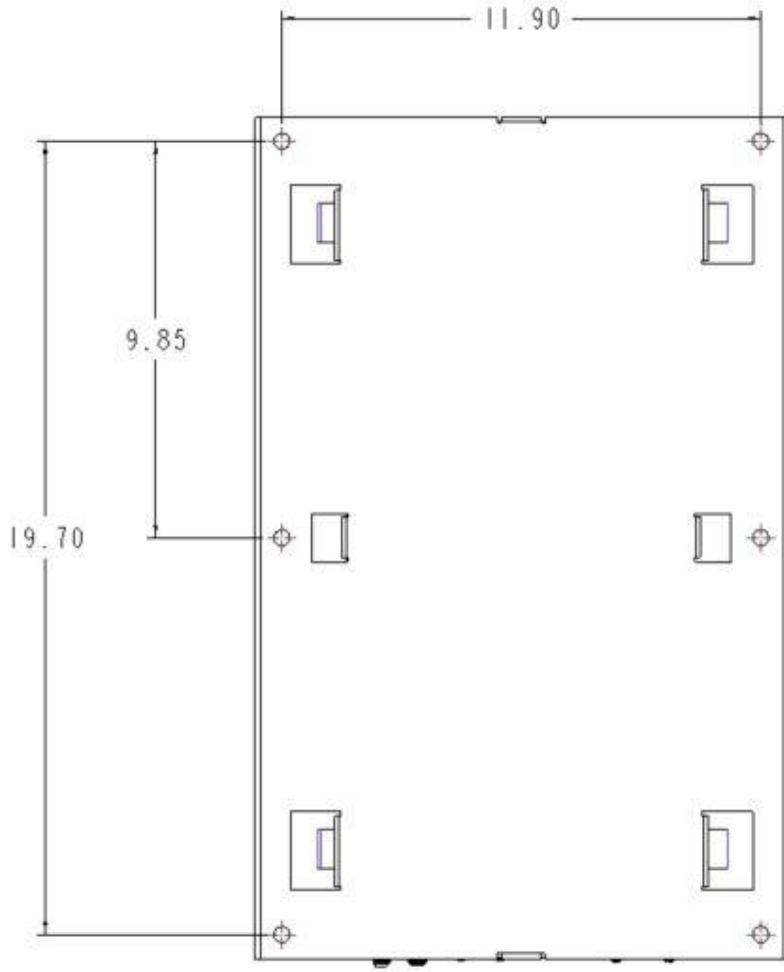


INTEGRITY PRO 600-1500 VA  
SEISMIC ANCHORAGE  
SLAB ON GRADE

BOLT TORQUE SPEC:  
3NM / 27 IN LBS  
UNIT WEIGHT:

INTEGRITY PRO SEISMIC ANCHORING INSTRUCTIONS:

- 1) MOVE THE UPS TO THE INSTALLATION LOCATION
- 2) BOLT UPS SEISMIC ANCHOR. NXT PART NUMBER 001-00089-01-FNL OR 001-00090-01-FNL TO THE FLOOR USING 3/8" GRADE 8 EXPANSIONS ANCHORS (6X) FOR CONCRETE AS DESCRIBED BELOW.

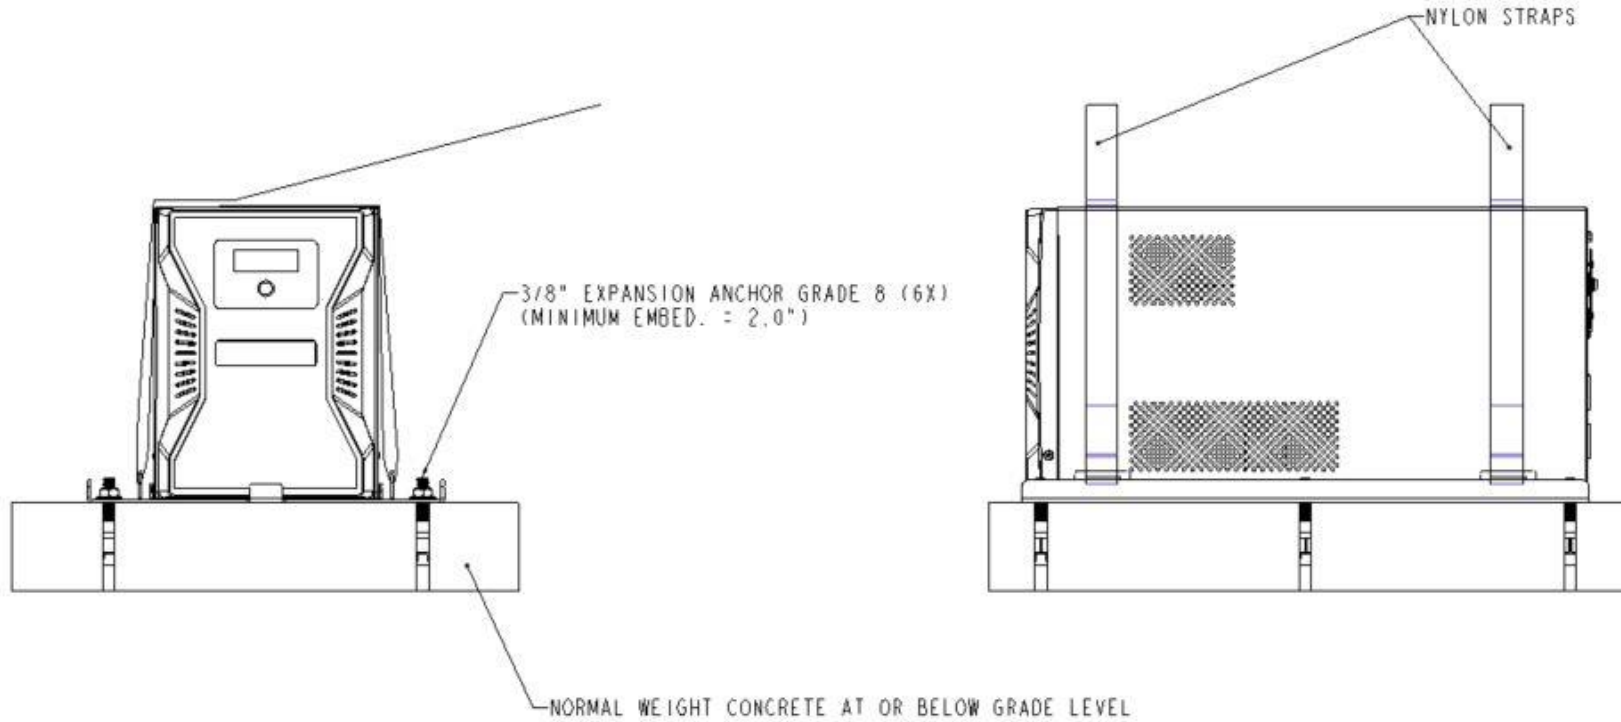

INTEGRITY PRO 600-1500 VA  
SEISMIC ANCHORAGE  
UPPER FLOOR

BOLT TORQUE SPEC:  
3NM / 27 IN LBS  
UNIT WEIGHT:

INTEGRITY PRO SEISMIC ANCHORING INSTRUCTIONS:

- 1) MOVE THE UPS TO THE INSTALLATION LOCATION
- 2) BOLT UPS SEISMIC ANCHOR. NXT PART NUMBER 001-00089-01-FNL OR 001-00090-01-FNL TO THE FLOOR USING 3/8" GRADE 8 THREADED RODS (6X) THRU FLOOR.

