

Battery connection procedure for NPTU800, 1100 and 1500-OR-N

For safe transportation, this unit is shipped with the batteries disconnected. The batteries must be connected before the UPS is put into operation. The below instructions will guide you through the battery connection process.

- 1) Detach the battery plastic cover plate by using a Philips screwdriver and removing the (2) screws located on the front left side of the unit (fig. 1). Take care not to discard the screws as they will be used to reattach the front panel.



Fig.1

- 2) Now gently pull open the plastic battery cover plate and place it to the side (fig.2).



Fig. 2

- 3) Connect the battery connector to the inverter connector (fig. 3). Ensure black is connected to black and red to red. Ensure the connection is tight.



Fig.3

- 4) Snap the white battery connector lock down back in place and ensure all connections are tight. You can now reattach the plastic front panel. The UPS is now ready to be put into operation.

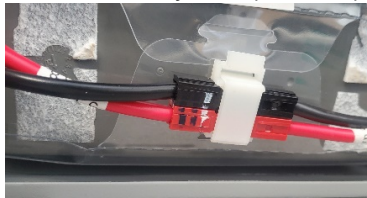


Fig 4.