



Battery connection procedure for NPTU250 and 400-GL-N

For safe transportation, this unit is shipped with the batteries disconnected. The batteries must be connected before the UPS is put into operation. The below instructions will guide you through the battery connection process.

- 1) Detach the battery plastic cover plate by using a Philips screwdriver and removing the (2) screws located on the front bottom left and right side of the unit (fig. 1). Take care not to discard the screws as they will be used to reattach the front panel.

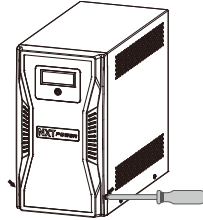


Fig.1

- 2) Now gently open the plastic battery cover by pushing down and then forward (fig.2).

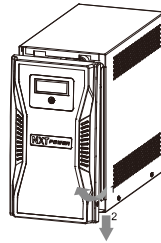


Fig. 2

- 3) Connect the ups red wire to the battery Positive (red) terminal (fig. 3). Insure black is connected to black and red to red. Ensure the connection is tight. (fig.3)



Fig.3

- 4) You can now reattach the plastic front panel. (fig. 4) The UPS is now ready to be put into operation.

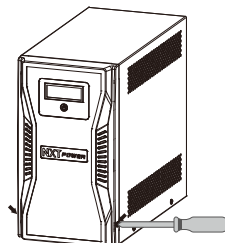


Fig 4.