


# INTEGRITY MAX <sup>LT</sup> Battery Cabinet

**NPB24-72**

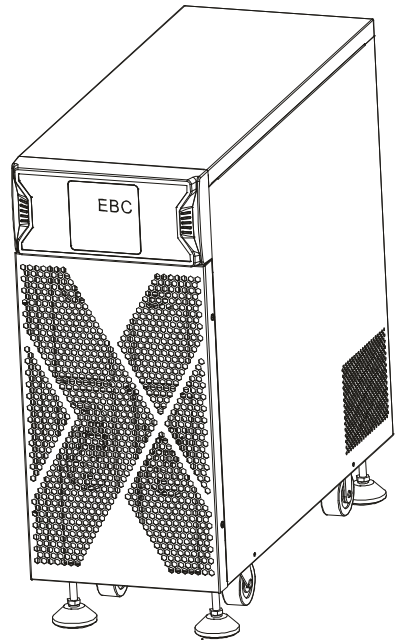

# Table of Contents

<b>1. IMPORTANT SAFETY INSTRUCTIONS .....</b>	<b>1</b>
<b>2. EBC Functional Descriptions .....</b>	<b>1</b>
2.1. Rear Panel Descriptions .....	1
<b>3. Installation and Operation.....</b>	<b>2</b>
3.1. Unpacking.....	2
3.2. Selecting Installation Position .....	2
3.3. Installation Instructions .....	3
3.4. Storage Instruction .....	4
3.5. Replacing the Battery .....	4
3.6. Specification .....	5
3.7. Recycling the Used battery.....	5


1. IMPORTANT SAFETY INSTRUCTIONS

SAVE THESE INSTRUCTIONS - This manual contains important instructions that should be followed during installation and maintenance of the UPS and batteries.

Read the instructions carefully to become familiar with the equipment before starting to install.  
Notify the carrier and dealer if there is any damage.

- This battery bank is connected to an UPS. There will be voltage at the output terminals if the UPS is turned on even if the input AC Mains is not available.
- Do not try to repair the unit yourself, contact your local supplier or your warranty will be void.
- To prevent overheating of the battery bank, keep all ventilation openings free from obstruction. Keep the battery bank front/rear panel 20 cm away from the wall.
- Make sure the battery bank is installed within the proper environment as specified. (0–40°C/32–104°F and 30-90%RH non-condensing)
- Do not install the battery bank at outdoor sites; this battery bank is designed for indoor use only.
- This battery bank is not designed for use in dusty, corrosive and salty environment.
- The warranty for this battery bank will be void if water or other liquid is spilt or poured directly onto the battery bank. Similarly we do not warrant any damage to the battery bank if foreign objects are deliberately or accidentally inserted into the battery bank enclosure.
- The battery will discharge naturally if the system is unused for a period of time. Long-term storage without recharge maintenance could cause batteries damaged.
- It should be recharged every 2-3 months if unused. If this is not done, then the Warranty will be null and void. During UPS normal operation, batteries will be automatically maintained in full charged condition.
- Servicing of batteries should be performed or supervised by trained personnel with knowledge of batteries and the required precautions.
- Replace only the same quantity, type & capacity batteries when needed.
- Make sure the battery is the same quantity/voltage before connect battery Cable.
- CAUTION – Do Not Dispose of Battery(ies) in open fire or high temperature environment. The Battery May Explode.
- CAUTION – Do not open or mutilate the batteries. The electrolyte of the batteries is toxic and harmful to the skin and eyes.
- CAUTION – Risk of electric shock – Battery circuit is not isolated from AC, hazardous Voltage may exist between battery terminals and ground. Test before touching with bare hands.
- CAUTION – A Battery can present a Risk of Electrical Shock and High Short Circuit Current. The Following Precaution Should be Observed When Working on Batteries:
  - A. Remove watches, rings, or other metal wearing objects.
  - B. Use tools with insulated handles and wear rubber gloves and boots.
  - C. Do not lay any metal tools or parts on top of batteries.
  - D. Disconnect charging source prior to connecting or disconnecting battery terminals.
  - E. Remove battery grounds during installation and maintenance to reduce likelihood of shock.
  - F. Remove the connection from ground if any part of the battery is determined to be grounded.

2. EBC Functional Descriptions  
2.1. Rear Panel Descriptions

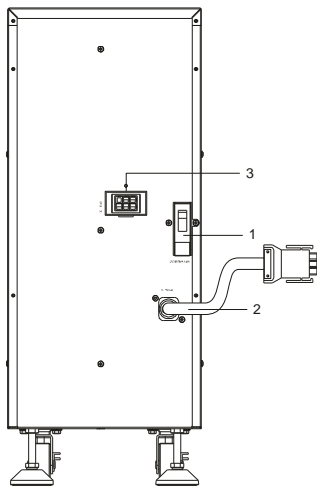


1. DC Breaker	1. Battery Over-current Protection.
2. DC Power Cord	2. Easily remove battery bank from system.
3. Battery Connector	To link with UPS and battery banks.
	Battery bank extending connector.

3. Installation and Operation

Please read the Safety Instruction guide before installing the EBC.  
Note: The packing condition and the external outlook of the unit should be inspected carefully before installation. Retain the packing material for future use.

3.1. Unpacking

Remove the packing foams and take the battery bank out of the box.  
The packaging is recyclable and reusable.  
**Warning:** The unit could be quite heavy. Check the weight of the unit before operating to avoid injury.

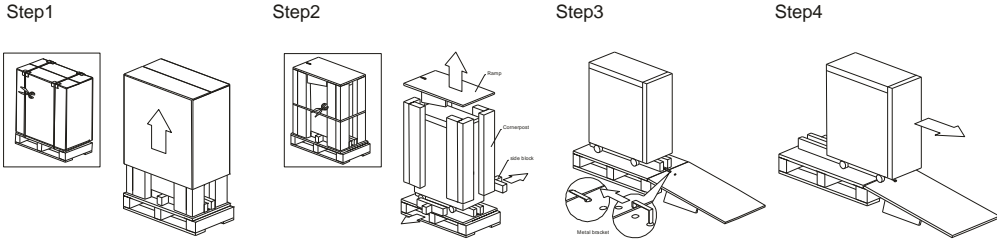

Standard Package includes User's Manual

C1 : 6 Pin Anderson Fixing pieces




x1



3.2. Selecting Installation Position

It is necessary to select a proper environment to install the unit, in order to minimize the possibility of failure to the battery bank and extend the life of the batteries. Please follow the instructions below:

- 1. Keep at least 20cm (8 inches) clearance from the rear panel of the battery bank from the wall or other obstructions.
- 2. Do not block the air-flow to the ventilation openings of the unit.
- 3. Ensure the installation site environmental conditions are in accordance with the battery bank working specifications to avoid overheat and excessive moisture.
- 4. Do not place the battery bank in a dusty or corrosive environment or near any flammable objects.
- 5. This battery bank is not designed for outdoor use.

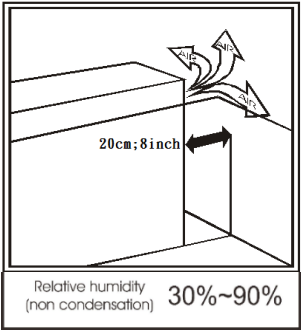

3.3. Installation Instructions  
Connect DC Cable

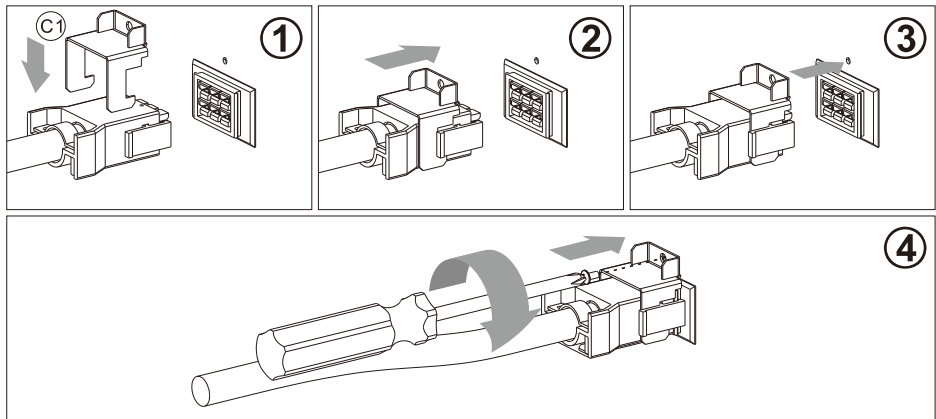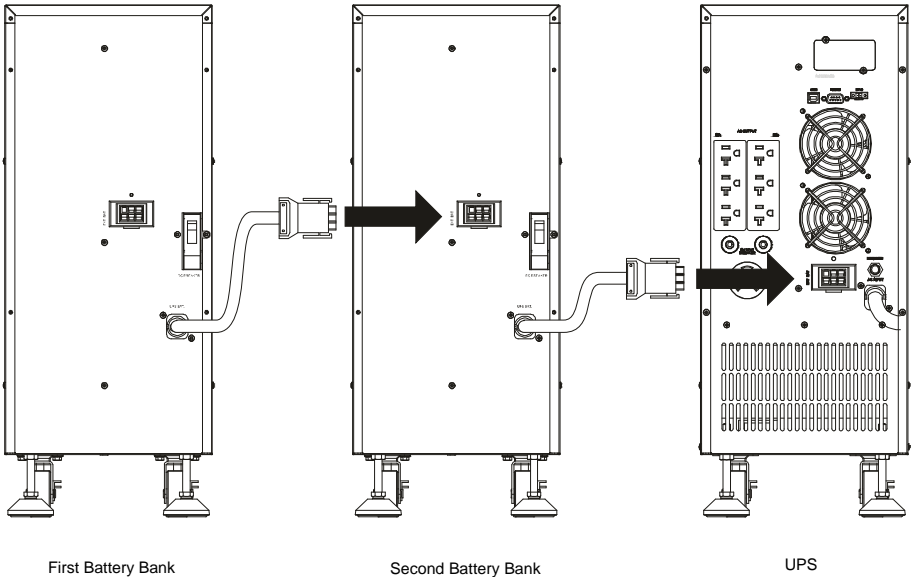


3.4. Storage Instruction

For extended storage through moderate climate(-15 to +30 °C / +5 to +86 °F), the batteries should be charged for 12 hours every 6 months by plugging the UPS power cord into the wall receptacle or by an external charger. Repeat this every 3 months under high temperature (+30 to +45 °C / +86 to +113 °F) environment.


**Warning:** Lead-acid battery could be drained and damaged by long-term self-discharge naturally without maintenance.

3.5. Replacing the Battery


Step1

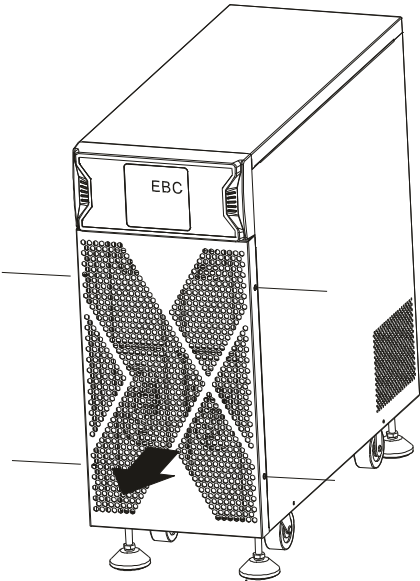



Step2

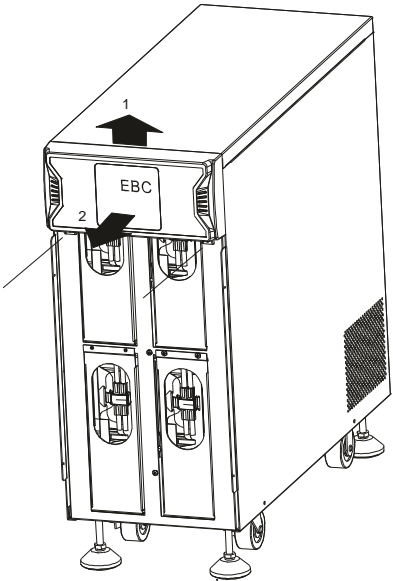



Step3

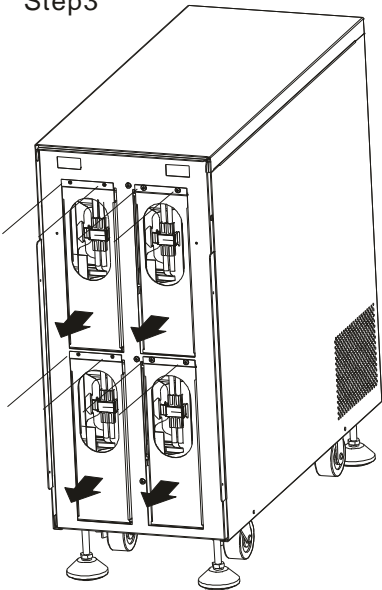

Step4

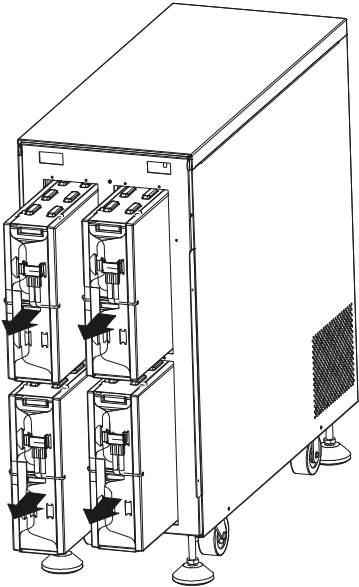

3.6. Specification

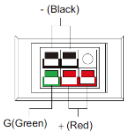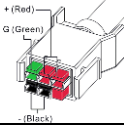Model NO.	NPB24-72
Voltage Rating	72VDC
Capacity x Strings	7/9Ah x 4
DC Sockets 6p	
DC Plugs 6p	
Dimensions (WxHxD, inch/mm)	8.9 x 22 x 22.8 227 x 560 x 580
Weight (9AH) (kg/lb)	192.68 lb 87.04 kg
Weight (7AH) (kg/lb)	176.01 lb 79.84 kg
Recommended Recharge Current	10.8A(max)
Output Current (max)	50A
Operation Environment	0~40°C / 32~104°F, 30-90%RH non-condensing
Storage Environment	-15~45°C, 30-90%RH non-condensing
Compliance	UL, cUL

3.7. Recycling the Used battery

Contact your local recycling or hazardous waste center for information on proper disposal of the used battery.





192321752095002